

# Minolta G600 Setup

## PhotoTop Configuration

### ***Recording /Playback Mode***

Topic	Factory Default	PhotoTop Custom	Manual Page #
Flash Mode	AutoFlash	Fill In	pp 28 & pp 78
Focus Mode/Self Timer	Cancelled		pp 30
Display Mode	Standard Display		pp 27
Image Size	2816 x 2112	2272 x 1704	pp 36
Compression Rate	Normal	Fine	pp 36
Movie Recording	Cancelled		pp 38
Exposure Compensation	0.0		pp 39
AE Metering Mode	Center-Weighted		pp 41
White Balance	Auto		pp 40
Monochrome	Off		pp 42
Digital Zoon	Off		pp 43
Monitor Adjustment	Bright/Color		pp 44
Slow Shutter Limit	Off		pp 48
Manual Exposure	Off	Manual ON - f2.8 1/250	pp 48
Quality	Off	<b>User 1</b>	pp 49
Camera Sensitivity ISO	Auto	Manual 100 ISO	pp 51
Flash Compensation	0.0		pp 51
Saturation	0		pp 52
Contrast	0		pp 52
Sharpness	0		pp 52
Color	R.G.B. reset to 0		pp 53

### ***Setup Menu***

Topic	Factory Default	PhotoTop Custom	Manual Page #
Recording Menu	Basic	Details	pp 72
Quick View	Off		pp 73
Info Display Setup	On		pp 82
Beep (Sound)	On		pp 74
Effect (Sound)	On		pp 74
Shutter (Sound)	On		pp 74
Self-Timer Delay	10 Seconds	Off	pp 73
Auto Power Off	3 minutes		pp 74
File-Number Reset	Off		pp 75
Memory Priority	SD		pp 75
Add Audio Setup	If Selected	Off	pp 76
Custom – Flash Modes	All On	Fill-In On, all others OFF	pp 28
Custom – Focus Modes	Fixed Focus OFF	Fixed Focus 2M	pp 26
Custom – AF AE AWB	All Off		pp 78
Cont-Adv Focus Lock	Off		pp 80

## ***PhotoTop Custom Configuration Details***

### **Flash Mode**

Select Menu...Setup...Custom...Set/Flash...

- Auto OFF
- Red Eye OFF
- **Fill-In ON (Lighting Bolt symbol)**
- Night Portrait OFF
- Flash Cancel OFF

### **Focus Mode**

Select Menu...Setup...Custom...Set/Macro...

- Auto OFF
- Macro OFF (flower symbol)
- Landscape OFF (Mountain symbol)
- Self Timer OFF
- Macro-Self Timer OFF
- Landscape-Self Timer OFF
- 4m OFF
- **2m ON**
- 1m OFF

### **Resolution**

Select Menu...Resolution...Size...2272 x 1704

### **Compression**

Select Menu...Resolution...Size...Fine

### **Camera Sensitivity ISO**

Select Menu...Quality...Set to 1

This should set the following automatically

- ISO Speed 100
- Flash 0
- Saturation 0
- Contrast 0

### **Manual Exposure**

Select Menu...Man Exposure On (if it is set to Man Exposure OFF then use the right arrow to change the setting).

Camera must be set in Manual Exposure mode for use with PhotoTop Digital Templating System.

### **Default Setup**

**Do not use this setting unless directed to do so by a PhotoTop Support Technician! ...PhotoTop photos taken using camera factory defaults will cause process failure.**

Select Menu...Setup...Default