
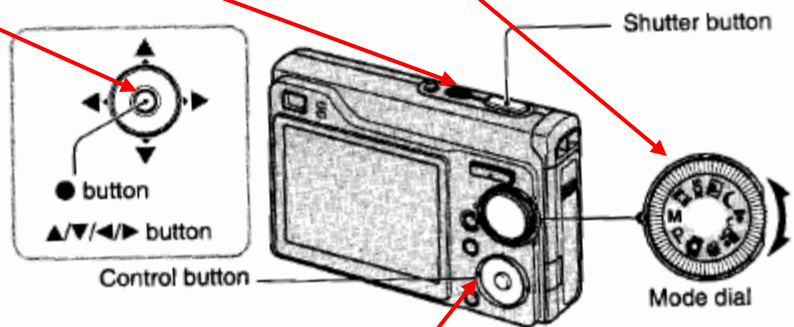



Re-setting of Sony DSC-W200 digital camera for PhotoTop®

1. Power the camera on (smaller button on top), turn **Mode dial to M** (manual position)
2. Then press the center button on the lower dial, this is the Control button.
3. Using the arrows of the Control button, to move left/right to set the **aperture to F2.8**. Then using the up or down arrows set **shutter**

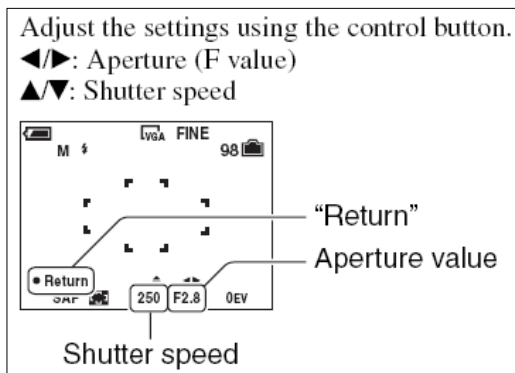

speed to 250. (see example below)


4. Press the center Control button again and the word “set” will appear where the word “return” was.
5. Press the small **MENU button** to display the menu.
6. Use the **up arrow, repeatedly** on the Control dial to get to the first menu choice which is **Image Size**.
7. Using the left /right buttons select **Image Size of - 5M** then push the down button.
8. Using the left /right buttons select **REC Mode to - Normal** then push the down button.
9. Using the left /right buttons select **Color Mode to - Normal** then push the down button.
10. Using the left/right buttons select **ISO to - 400** then push the down button.
11. Using the left/right buttons select **Metering Mode to -Spot** then push the down button.
12. Using the left/right buttons select **Focus to - 3.0m** then push the down button.
13. Using the left/right buttons select **White Bal to - WB flash, not Auto** push the down button.
14. Using the left/right buttons select **Flash Level to - +/-0 Normal** then push the down button.
15. Using the left/right buttons select **Red Eye Reduction to - Off** then push the down button.
16. Using the left/right buttons select **Contrast to- D-R** then push the down button.
17. Using the left/right buttons select **Sharpness at - +/-0 Normal** then push the down button.
18. Using the left/right buttons select **Steady Shot to - Off** then push the down button.
19. Press the down arrow to **SETUP, then press the center Control button**,. this will take you to the Shooting Settings.

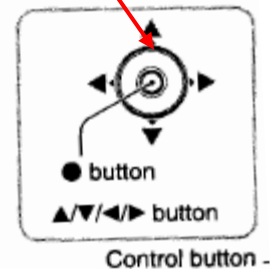

* Instructions are continued on the other side of this card.

Shooting Settings

20. Press the right arrow button to get to AF Illuminator, press right arrow again, then use up/down arrows to set the **AF Illuminator to – Off** position, press the center button to set it, then down arrow to the next setting.
21. Press the right arrow, use up/down arrows to set **Grid Line to – Off** , press the center button to set it, then down arrow to the next setting.
22. Press the right arrow, use up/down arrows to set **AF Mode - Monitor** , press the center button to set it, then down arrow to the next setting.
23. Press the right arrow, use up/down arrows to set **Digital Zoon - Off** , press the center button to set it, then down arrow to the next setting.
24. Press the right arrow, use up/down arrows to set **Conversion Lens _ Off** , press the center button to set it, then down arrow to the next setting.
25. Press the right arrow, use up/down arrows to set **Auto Orientation - Off** , press the center button to set it, then down arrow to the next setting.
26. Press the right arrow, use up/down arrows to set **Auto Review - On** , press the center button to set it. Now **press the MENU button and the settings will be saved.**
27. Use the flash button to select - **Flash On Always use flash.** It will show a lightning bolt arrow on the screen when turned on.

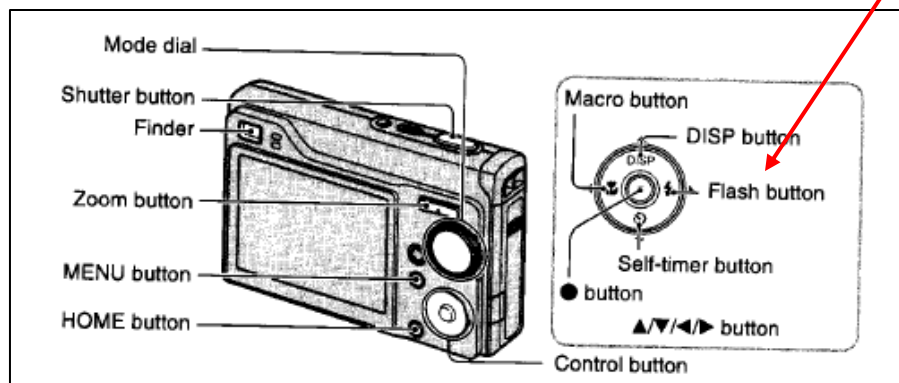

The DISP (display button) can be pressed repeatedly until you see your settings.

If you press Self-timer you can press it again until it is turned off.

Warning –

If you accidentally hit the Macro button stop shooting pictures. You will need to go back and reset the **Focus setting to 3.0m** again.