


Using PhotoGrip®

PhotoTop® PhotoGrip® is designed to keep the operator from accidentally changing any of the settings buttons on the back of the camera. The settings are preset for use with PhotoTop®'s measurement system.

- With the camera power turned off, thread the wrist strap through the hole in PhotoGrip®.
- Press PhotoGrip® firmly onto the end of the camera. Place the wrist strap around your wrist.




- When you are ready to take photos turn the Mode dial to **M** (see below)
- Then turn on the camera power.
- When you are finished taking photos turn off the power.

- Turn the Mode dial to the “playback setting,” (arrow) 
- You may now remove the PhotoGrip®, turn the camera on and view the photos.
- Anytime you want to take photos, attach PhotoGrip® before turning on the power.
- Turn off the power before removing PhotoGrip®

Reminder


Use (M) manual setting for PhotoTop®.
Do not use the zoom. (prevented with PhotoGrip®)
Leave all settings as set.
Each camera is calibrated individually using PhotoTop® calibration and is to be used with its matching software for PhotoTop® measurement. The Manual Mode has been preset for use with the software.

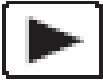Cameras are shipped with the “Mode dial” set to the playback setting. (arrow) 

To use with PhotoTop®, turn the dial to **M** manual setting.

If you touch any buttons other than the power or shutter button to take photos you will change the settings.

To reset the camera's setting please follow the step by step directions on the back of this card.

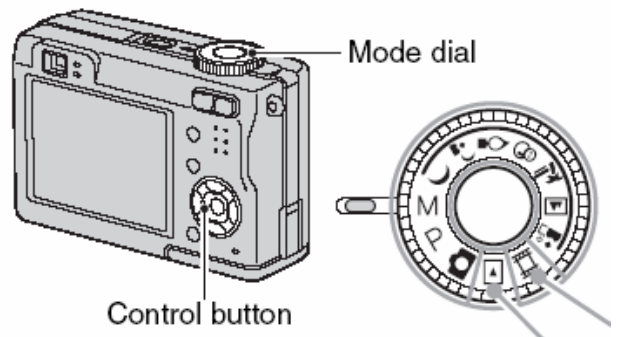

Re-setting of Sony DSC-W5 digital camera for PhotoTop®

Power the camera on (button on top), turn selector to M (manual position), then press the MENU button on the back of the camera.



Five-Way Arrow Pad:

Using the Arrow Pad move left, right, then the up and down to set the following settings.


Start by pushing the left arrow again and again until you come to the first menu setting - **Focus**

Focus, move using the up arrow to set at **3.0 m** then click the right arrow
Metering Mode, move up to set at **Spot** then click the right arrow
White Balance, move up to set at **WB lighting bolt arrow**, right arrow
ISO, set at **100**, right arrow
P. Quality, at **Fine**, right arrow
REC Mode, at **Normal**, right arrow
Flash level, at **Normal**, right arrow
P. Effect, at **Off**, right arrow
Saturation, at **Normal**, right arrow
Contrast, at **Normal**, right arrow
Sharpness, at **Normal**, right arrow



Click right arrow again

Using the right arrow move to **setup** that looks like the picture to the left.

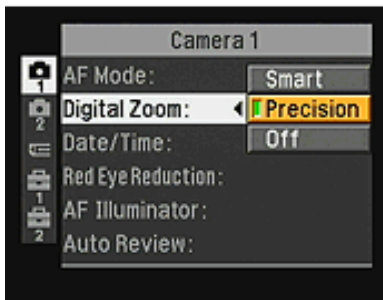

On the **AF Mode**, change to **Monitor** by using the right arrow, then click down to set a monitor, now click the left arrow, then down arrow to back to Digital Zoom

On the **Digital Zoom change to the off** position by using the right arrow then the down arrow.

Now press the MENU button again to turn off the MENU.

Using the up arrow button

set the flash to on. It will show a yellow lighting bolt arrow when turned on. This will change to white in the display screen.

Next press the center Set button on the Five-Way Arrow Pad, then using the left, right, and up and down arrow keys **set the speed at 250 and the F-stop at F2.8** You will see these at the bottom of the screen. See diagram to the right. Now press the set button again.

Last look below the arrow pad, press the “trash/ image size” icon and set at **5M press** the key again. The settings will now be returned to the as shipped M (manual) settings for use with PhotoTop®.

Adjust the settings using the control button.

◀/▶: Aperture (F value)

▲/▼: Shutter speed

